

GOIP SMS Management Server Manual 1.0

Introduction:

GOIP SMS Management Server is used to control sending message. User can send、 search or other operations on the web server

Installation Requirements:

Be sure that apache2(or above version)、 php4(or above version) and mysql4(or above version) has been installed on the Linux system. The software is used UTF-8 character coding.

Installation

一、 Windows system installation

- 1、 install php、 mysql and apache
- 2、 decompression the software:http://118.142.51.162/update/goip_install-v1.21.4.tar.gz

to the directory of apache server (maybe the default directory is htdocs/ or www/)

3、 click “import_sql.cmd” in goip\inc, you will see the screen. Then input password of root.(the mysql process should be started up. If “mysql command is not recognized” appeared , you should input database by yourself: click “start-> run”, input “cmd” and then input command: **mysql installation path/mysql/bin/mysql -uroot -p < apache server directory/goip/inc/goipinit.sql**)

4、 double click “install.cmd” to install

5、 The default enabled UDP port is 44444.If a firewall installed, please join the trust 44444 UDP port list.


6、 Input GOIP manager URL: http://your_ip/goip in your browser, user: root password:root

7、 Click “system management”, add ID and password to goip parameter management.

8、 Open GOIP configuration webpage, fill the parameters in corresponding blank, the default port is 44444

9、 Create groups and contact, then you can send message

10、 you should set International Telnumber in "System Manage->Provider Manage"

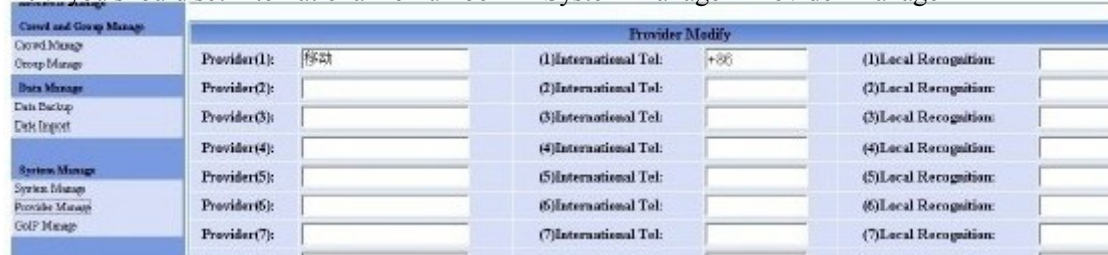

Control and Group Manage		Provider Modify				
Group Manage	Provider(1):	<input type="text" value="移动"/>	(1)International Tel:	<input type="text" value="+86"/>	(1)Local Recognition:	<input type="text"/>
Group Manage	Provider(2):	<input type="text"/>	(2)International Tel:	<input type="text"/>	(2)Local Recognition:	<input type="text"/>
Data Manage	Provider(3):	<input type="text"/>	(3)International Tel:	<input type="text"/>	(3)Local Recognition:	<input type="text"/>
Data Backup	Provider(4):	<input type="text"/>	(4)International Tel:	<input type="text"/>	(4)Local Recognition:	<input type="text"/>
Data Import	Provider(5):	<input type="text"/>	(5)International Tel:	<input type="text"/>	(5)Local Recognition:	<input type="text"/>
System Manage	Provider(6):	<input type="text"/>	(6)International Tel:	<input type="text"/>	(6)Local Recognition:	<input type="text"/>
System Manage	Provider(7):	<input type="text"/>	(7)International Tel:	<input type="text"/>	(7)Local Recognition:	<input type="text"/>

二、 Linux system installation

1) Login Linux system as root

input command

```
wget http://118.142.51.162/update/goip\_install-v1.21.4.tar.gz
```

input command

```
tar -xzf goip_install-linux.tgz
```

input command

```
cd goip_install
```

input command

./goip_install.sh

2) installation processing as this:

./goip_install.sh (Starting GoIP SMS System install)

Configure httpd config:

Enter the httpd config file PATH:

The default httpd configuration file path is “/etc/httpd/conf/httpd.conf”, default press Enter

Choose your Mysql Database version:

4

5

The default mysql version is 4

Import GOIP databased

Input the Mysql root password if the password exists:

Enter your Mysql PATH

The default Mysql path is “/usr/bin/mysql” , default press Enter

Copying file to /usr/local/goip

Install finished

3) The default enabled UDP port is 44444.If a firewall installed, please join the trust 44444 UDP port list.

4) Then restart your httpd.


5) Input GOIP manager URL: http://your_ip/goip in your browser, user: root password:root

6) Click “system management”, add ID and password to goip parameter management.

7) Open GOIP configuration webpage, fill the parameters in corresponding blank, the default port is 44444

8) Create groups and contact, then you can send message

9) you should set International Tel number in "System Manage->Provider Manage"

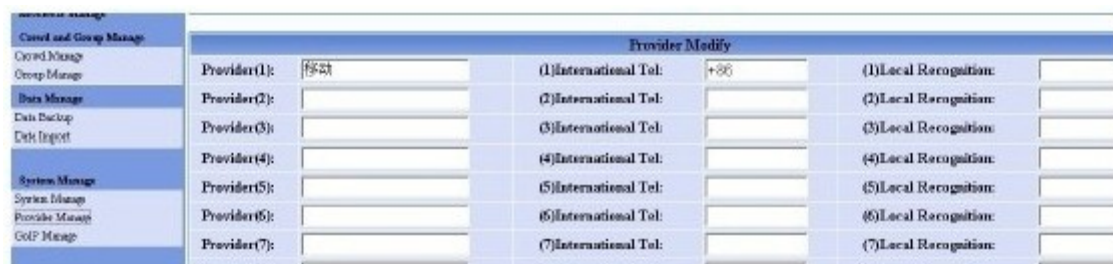

Control and Group Manage		Provider Modify				
Group Manage	Provider(1):	<input type="text" value="移动"/>	(1)International Tel:	<input type="text" value="+86"/>	(1)Local Recognition:	<input type="text"/>
Data Manage	Provider(2):	<input type="text"/>	(2)International Tel:	<input type="text"/>	(2)Local Recognition:	<input type="text"/>
Data Backup	Provider(3):	<input type="text"/>	(3)International Tel:	<input type="text"/>	(3)Local Recognition:	<input type="text"/>
Data Export	Provider(4):	<input type="text"/>	(4)International Tel:	<input type="text"/>	(4)Local Recognition:	<input type="text"/>
System Manage	Provider(5):	<input type="text"/>	(5)International Tel:	<input type="text"/>	(5)Local Recognition:	<input type="text"/>
System Manage	Provider(6):	<input type="text"/>	(6)International Tel:	<input type="text"/>	(6)Local Recognition:	<input type="text"/>
Provider Manage	Provider(7):	<input type="text"/>	(7)International Tel:	<input type="text"/>	(7)Local Recognition:	<input type="text"/>
GOIP Manage						